




WHAT'S **INCLUDED**

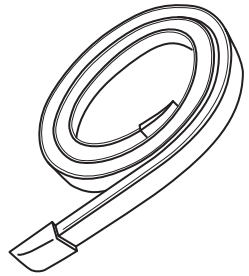

LED STRIP x1

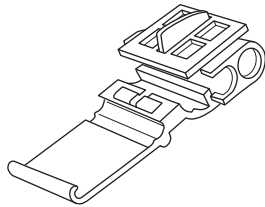


SCOTCHLOKS x2

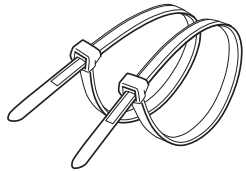

ZIP-TIES 8 INCH x4



ADHESIVE BOOSTER x1

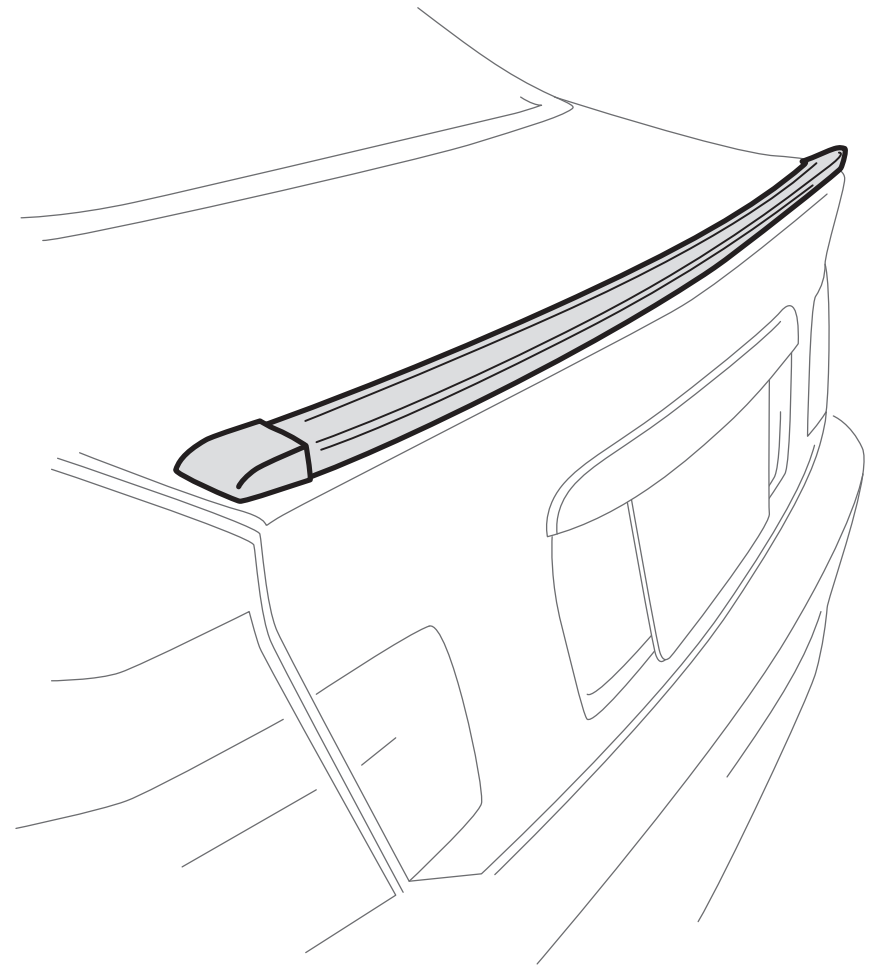

WARRANTY

60 DAYS WARRANTY. STARTING FROM THE ORDER DATE

OPT7 recommends installation for safety and guidance.
Modified installations or installation recommendations not specified by
OPT7 Lighting will void product warranty.

LED SPOILER

INSTALLATION MANUAL


INSTALLATION **STEPS**

STEP 1

Open your package, and verify that you have received all items (see section titled **PACKAGE INCLUDES**).

OPTIONAL

Test your strip first by following STEP 6 before mounting.

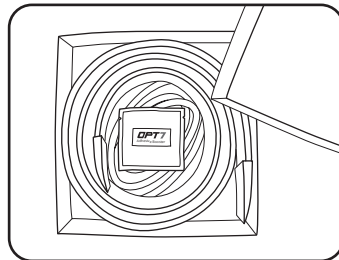


STEP 2

Measure the length of your trunk.
Trim the spoiler to size.

PLEASE NOTE

Once you have trim the LED Spoiler to size, remove the sheath from the end of the light strip when you are done. Next, apply or inject some hot-melt glue inside the sheath and re-insert it into the cut off area for better protection.

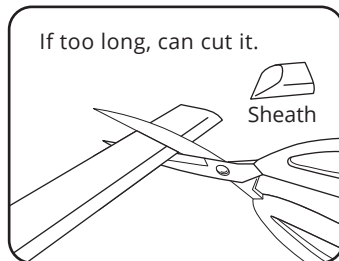


STEP 3

Thoroughly clean the surface where you plan on mounting the LED strip. (A dirty surface will prevent the strip from attaching firmly.)


NOTE

Please use isopropyl alcohol (Rubbing alcohol) to prep the surface area clean. This is essential to ensure a strong contact area.

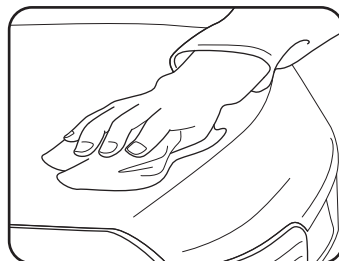


STEP 4

Wipe the mounting area with the included adhesive booster.

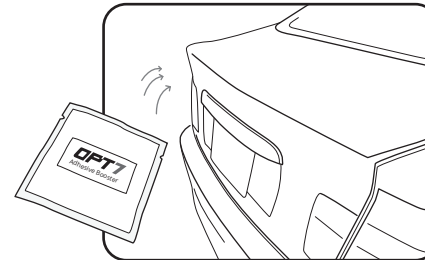

STEP 5

Firmly press the LED strip to the mounting area, and hold for 3 seconds.

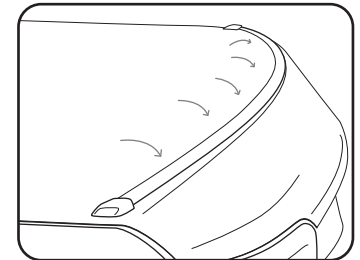

STEP 6

To power the LED strip, find your vehicle's corresponding wiring »

OPTIONAL

Use included Scotchlocks to crimp the wires.

NOTE


Additional wiring may be needed for longer vehicles.

RECOMMENDED INSTALLATION

For your best installation option, we strongly recommend that you connect the power to the parking light.

NOTE

If you want to turn the lights on during daytime use, simply turn on the parking light switch in your vehicle, and that should do it.

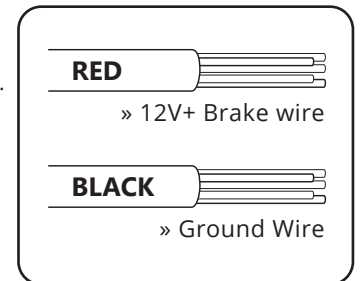

STEP 7

Use included zip-ties to tuck away excess wiring.

NOTE

If you don't want your trunk lid to be seen sticking out of excess wiring, we would recommend that you drill a hole to get the wire from the spoiler before installing it.

