DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

NEED HELP?



Access our Knowledge Base by scanning the **QR code**, or visit **www.opt-7.com/support**









INSTALLATION MANUAL

INSTALLATION

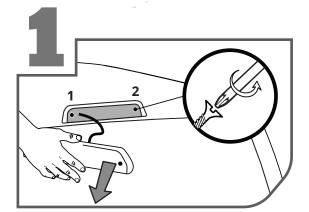


Remove the brake light.


In a typical case, remove 2 fasteners and pull rearward on the brake light housing to release it from the body of the vehicle.

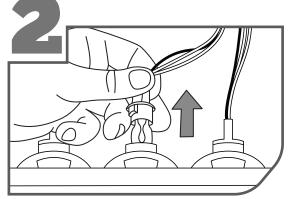


- 1. Remove bulb socket from original 3rd brake light housing.
- 2. Remove original halogen bulb from bulb socket

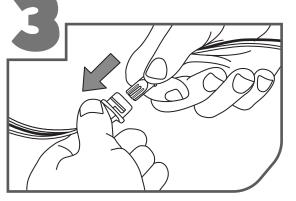


- 1. Insert Red/Black wire connector from OPT7 light housing into one of the original "Brake light" bulb socket. Leave the other "Brake light" bulb socket empty.
- 2. Insert Blue/White wire connector from OPT7 light housing into original "Reverse light" bulb socket.

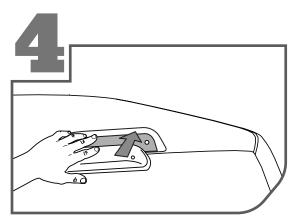

Seat the new brake light housing into it's appropriate slot.

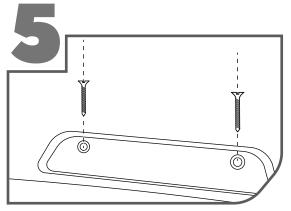

Install the 2 fasteners that were removed from the original brake light housing.

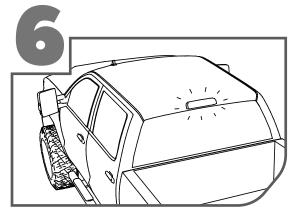

Test your new brake light for function!